



Block diagram of PCB 111000_UNO

UNO device is loaded with hex/text bootloader and hosts user projects
 Plug in PCB device is loaded with mini-OS and an external programmer

Single click of reset switch resets the user project
 Double click of reset switch launches the UNO hex/text bootloader